

# MODEL 36066 - BIGHORN

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**


To prolong the life of the tent floor, select a level, clean area for the campsite.

To prevent damage to the zipper, unzip the door to allow air to enter the tent.

**STEP 1:** Spread tent out flat, floor side down. Unzip door.

**STEP 2:** Extend fiberglass frame sections by pulling out each section and placing it into the metal ferrules. You will have 3 frame poles. The two longer poles (Key A) are the tent poles and the shorter pole (Key B) is the fly pole.


**STEP 3:** While making sure sleeves are in line with each other, slide each fiberglass tent pole (Key A) through the sleeves that are opposite each other on the roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

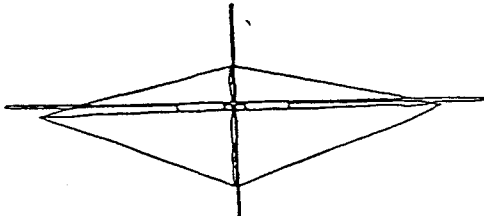

**STEP 4:** Starting at the back corners of the tent, insert pins located at each corner into the ferrules at the ends of the fiberglass frame sections. To raise tent, repeat the same procedure at the front corners. Flexing the fiberglass frame will be necessary.

**NOTE:** It may be necessary to hold the corner of the tent with the ring and pin in place.

**STEP 5:** Clip plastic hooks to the fiberglass frame sections.

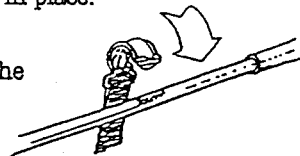


**STEP 6:** Stake down tent by inserting tent stake through the metal ring at each corner of the tent, hammering into ground by using a hammer or mallet. Make sure to pull tent out even and tight.

Tent should appear as shown.




**STEP 7:** Place ends of the fiberglass fly pole (Key B) into the pole pockets on the fly. Flexing the fiberglass may be necessary.

**STEP 8:** Using the ties in the center of the fly, tie the fly pole into place.

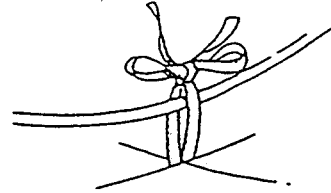

**STEP 9:** Place fly over tent making sure fly pole is in line with door of the tent. Attach hooks on the fly to the rings located at each corner of the tent. Wrap the velcro fasteners at each fly corner around the fiberglass tent poles.

Tent should appear as shown below.

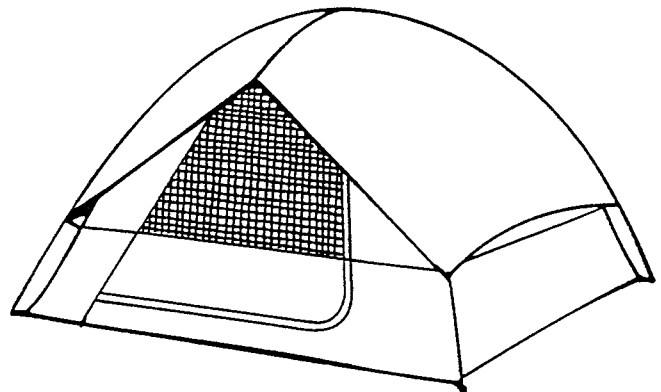

**NOTE:** To take down tent, follow steps above in the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.

# SAFETY AND CARE WARNING!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

**DO NOT...**

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

**DO...**

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY.** THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



## REPLACEMENT PARTS

If you have questions or need to order to a part, call 1-800-325-TENT or log into our website at [www.wenzelco.com](http://www.wenzelco.com). Have your model number and part number ready when you call.

**DO NOT ORDER BY REFERENCE KEY NUMBER.**

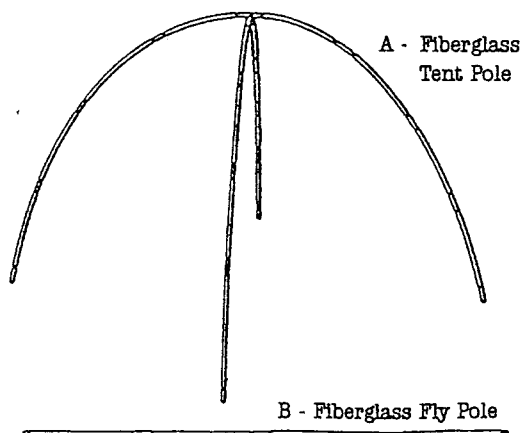

Send your request for parts to: **The Wenzel Company**  
502 Orchard Street  
New Haven, MO 63068

KEY NO.	MODEL NO. 36066		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent Pole Section	97-0005	2
B	Fiberglass Fly Pole Section	01-0013	1
	Complete Frame	53602900	1