

Model 36149 – Cedar Brook

1. Assembly Instructions

Important: We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.

Note: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors prior to tent setup, to allow air to enter the tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

 
Warning: During assembly of the main room and side room tent poles (Steps 5 and 7), the tent poles are in tension. If the poles are not held firmly in place by adults during assembly, the tension in the poles may cause them to break or one end of the pole to flip up, which could cause serious injury to you or others involved in assembling of the tent. To avoid this hazard:

- **Do have** two adults involved in assembling the tent.
- **Do have** one adult hold the end of the tent pole and place over the pin at the rear of the tent, while the second adult gently raises the roof of the tent and the crossed tent poles. When the tent and poles are raised, the first adult who is at the rear of the tent goes to the front of the tent and completes the pole connection at the front of the tent.

Step 1: Spread tent out flat, floor side down.

Step 2: Extend the fiberglass tent frame sections by pulling out each section and placing it into the metal ferrule. You will have six poles. The two longest pole sections (A) are the main tent poles. The next two longest pole sections (B) will be used on the sides of the tent. The two shortest poles with metal, bullet point and tips (C) will be used with the tent fly.

Step 3: While making sure sleeves are in line with each other, slide the main fiberglass tent poles (A) through the sleeves that are opposite each other on the sides and roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

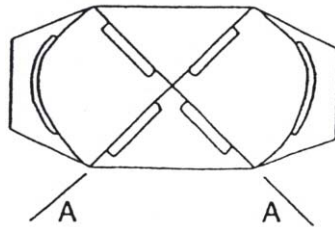


Step 4: starting at the back of the tent, insert pins located at the floor edge of the tent into the ferrules at the ends of the fiberglass frame sections. You will find double pins attached to each metal ring. One set is for the main tent pole and the other for the side poles.



Step 5: (Please read and follow the important safety warning that appears before step 1.) While one adult holds the end of the tent pole firmly in place over the pin at the rear of the tent, the other adult should now go into the front door of the tent and gently lift the roof of the tent and the crossed tent poles up off the ground.

 While the tent and poles are raised, the first adult who is at the rear of the tent, goes to the front of the tent, flexes the fiberglass pole and places the ferrule at the end of the main tent pole over the pin at the base of the tent. Repeat step for the other main tent pole. Clip plastic hooks to the fiberglass frame poles. Tie frame poles to tent with fabric ties at the center of tent roof.

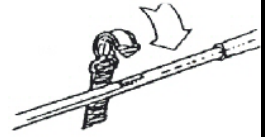

Step 6: Stake down tent by inserting the stakes through the metal rings at the base of the tent and the corner stake loops. Hammer stakes into ground at a 45-degree angle, by using a hammer or mallet. Make sure to pull tent out even and tight.

 
Step 7: (Please read and follow the important safety warning that appears before step 1.) To assemble the side rooms, locate the longer remaining fiberglass poles (B). Insert one of the pole sections through pole sleeve at the top of the side room. With an adult on each end of the side room pole, gently flex the pole into an arch and place the ferrules at the end of the fiberglass pole over the pins at the base of the tent. Repeat the same procedure for the remaining side room. Clip plastic hooks to frame.

Step 8: Unfold fly and place over tent. Attach the fly to the tent by hooking the S-hooks located at each of the fly corners to the rings at the base of the tent. Fasten the Velcro fasteners at each fly corner around the main tent poles.



Step 9: Insert one of the fly poles (C) into the sleeve at the very edge of the fly awning, over the front doors. Flex the fiberglass fly pole and insert each end into the reinforced metal grommets located on either side of the front doors. Repeat this step with the remaining fly pole and the fly awning over the rear tent window.

Step 10: There are guy loops located on the fly of the tent. Tie the four guy ropes to the loops on the fly edges over the side doors. Make a loop at opposite end of guy rope by using a slider (as shown) and place loop over tent stake. Adjust slider to make guy rope tight. Extra tent stakes have been included for this.

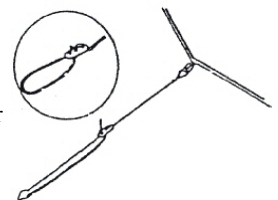

Tent should appear as shown.



Note: Convenience pockets are provided for storing small camping gear. There are also two divider curtains included which can be attached to the inside of the tent to separate it into three separate rooms.

To take down tent, follow the above steps in the reverse order. Be sure to leave doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, tie string around tent and slide into carry bag. Make sure tent is clean and dry before storing.

Safety And Care Instructions

Warning!

Keep all flame and heat sources away from this tent fabric! This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

 


Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at www.camping-n-gear.com Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

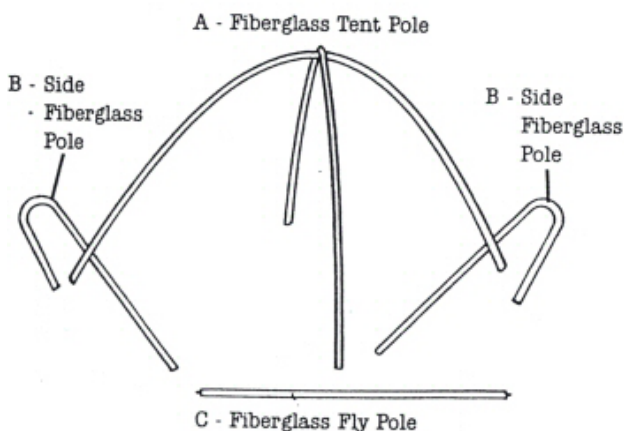

Key Number	Model No. 36149		Qty. Req.
	Description	Part Number	
A	Fiberglass tent pole-Main	00-0029	2
B	Side fiberglass tent pole	00-0087	2
C	Fiberglass fly pole	02-0051	2
	Complete frame	36149FR	1
	Replacement fly	36149FLY	1
	Divider curtain	36149DC	1
	Guy ropes	A1001	4
	Stakes	7.5 STAKE	15