

MODEL 35992 CHINOOK

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SET UP.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.


To prolong the life of the tent floor, select a level, clean area for the campsite.

To prevent damage to the zipper, unzip the door to allow air to enter the tent.

STEP 1: Spread tent out flat, floor side down.

STEP 2: Extend fiberglass tent frame sections by pulling out each section and placing it into the metal ferrule. The two longest pole sections are the tent poles and the shortest pole section is for the fly. The remaining pole sections are to be used for the side rooms.

STEP 3: While making sure sleeves are in line with each other, slide the fiberglass tent poles through the sleeves that are opposite each other on the sides and roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

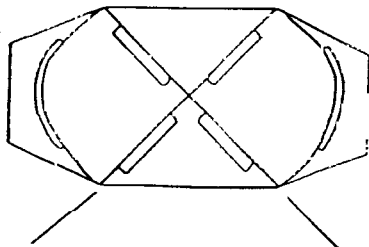

STEP 4: Starting at the back of the tent, insert pins located at the floor edge of the tent into the ferrules at the ends of the fiberglass frame sections. You will find double pins attached to each metal ring. One set is for the frame section to be used for the side rooms.



STEP 5: To raise tent, repeat the same procedure at the front of the tent. With a person at each end of the fiberglass poles, flex the poles into an upward position, forming two arches.

NOTE: As poles are raised, make sure metal ferrules do not catch on the sleeves. Clip plastic hooks to fiberglass frame sections.

STEP 6: To assemble side rooms, locate the remaining pole sections with metal ferrules on each end. Insert one of the pole sections through pole sleeve on one of the side rooms. Insert pins located at corners of tent into the ferrules at the ends of the fiberglass pole sections. Flexing the pole will be necessary. Repeat the same procedure for the remaining side room, clipping tent to frame.

STEP 7: Stake down tent by inserting stakes through metal rings at each corner of the tent and through stake loops at each corner of the side rooms. Hammer stakes into ground at a 45° angle by using a hammer or mallet. Make sure to pull tent out even and tight.

STEP 8: Place the ends of the fiberglass fly pole section into the pole pockets on the fly. Flexing the fiberglass may be necessary.

Using the ties in the center of the fly, tie fly pole into place.

STEP 9: Place fly over tent making sure fly pole is in line with door of tent. Attach hooks on the fly to the plastic "D" rings attached near the metal rings at the bottom edge of the tent.

Fasten the self-fasteners at each corner of the fly to the fiberglass frame.

Tent should appear as shown.



Convenience pockets are provided for storing small camping gear.

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

To roll tent up, fold into thirds lengthwise toward the door. Fold fly into thirds and lay on top of the tent. At opposite end of the door, start a small, tight roll with poles in pole bag and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Slide into carry bag. Make sure tent is clean and dry before storing.

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

If you have questions or need to order to a part, call 1-800-325-TENT or log into our website at www.wenzelco.com. Please have your model number and part number available.


DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

A - Fiberglass Tent Pole

B - Side Room
Fiberglass
Pole

B - Side Room
Fiberglass
Pole

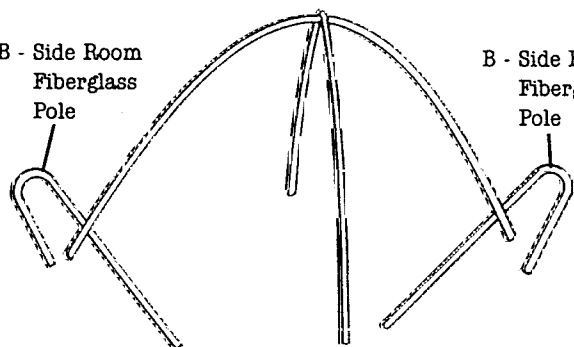

C - Fiberglass Fly Pole

KEY NO.	MODEL NO. 35992		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent pole	00-0058	2
B	Side Room Fiberglass Tent Pole	00-0059	2
C	Fiberglass Fly Pole	99-0025	1
	Complete Frame	53599200	1