

MODEL 36069 - DURANGO

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SET UP.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.


To prolong the life of the tent floor, select a level, clean area for the campsite.

To prevent damage to the zipper, unzip the doors to allow air to enter the tent.


STEP 1: Spread tent out flat, floor side down.

STEP 2: Extend fiberglass tent frame sections by pulling out each section and placing it into the metal ferrule. You will have six poles. The two longest pole sections (Key A) are the main tent poles. The next two longest pole sections (Key B) will be used on the sides of the tent. The two shortest poles with metal, bullet point end tips (Key C) will be used with the tent fly.


STEP 3: While making sure sleeves are in line with each other, slide the main fiberglass tent poles (Key A) through the sleeves that are opposite each other on the sides and roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

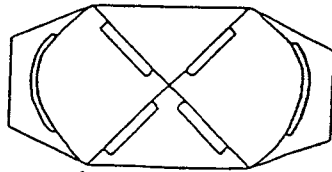

STEP 4: Starting at the back of the tent, insert pins located at the floor edge of the tent into the ferrules at the ends of the fiberglass frame sections. You will find double pins attached to each metal ring. One set is for the main tent pole and the other for the side poles.

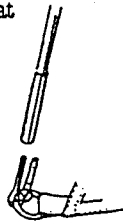


STEP 5: One person should now go into one of the front doors of the tent and gently lift the roof of the tent and the two tent poles up off the ground. The other person should carefully flex one of the poles and insert the pin at the front base of the tent into the ferrule at the end of the main tent pole. Repeat step for the other main tent pole. Clip hooks on the tent around the fiberglass poles.

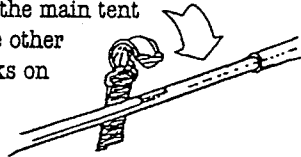

STEP 6: Stake down tent by inserting the stakes through the metal rings at the base of the tent and the corner stake loops. Hammer stakes into ground at a 45° angle, by using a hammer or mallet. Make sure to pull tent out even and tight.


STEP 7: Slide one of the side fiberglass poles (B) through the sleeve at either side of the tent. With a person at each end of the side pole, flex the fiberglass pole and insert the remaining pins at the tent base into the ferrules at the ends of the fiberglass pole. Repeat with the remaining side pole and the opposite end of the tent. Clip plastic hooks around frame poles.

STEP 8: Unfold fly and place over tent. Attach the fly to the tent by hooking the S-hooks located at each of the fly corners to the loops sewn to the tent. Fasten the Velcro fasteners at each fly corner around the main tent poles.

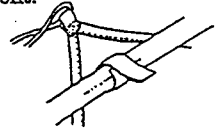

STEP 9: Insert one of the fly poles (C) into the sleeve at the very edge of the fly awning, over the front doors. Flex the fiberglass fly pole and insert each end into the reinforced metal grommets located on either side of the front doors. Repeat this step with the remaining fly pole and the fly awning over the rear tent window.

Tent should appear as shown.

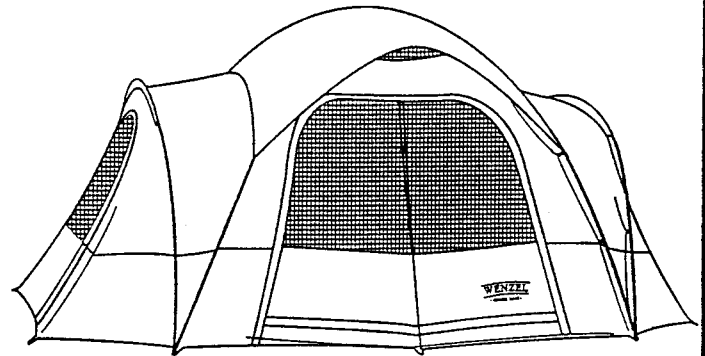

Your tent includes a divider curtain which can be attached to the inside ceiling and walls of your tent to divide into two rooms. There are also convenience pockets included to hold small camping items.

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, at the end opposite the doors. Roll tent toward doors to allow air to escape. Once rolled, tie a string or rope around tent to hold into place. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-TENT or log into our website at www.wenzelco.com. Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER.

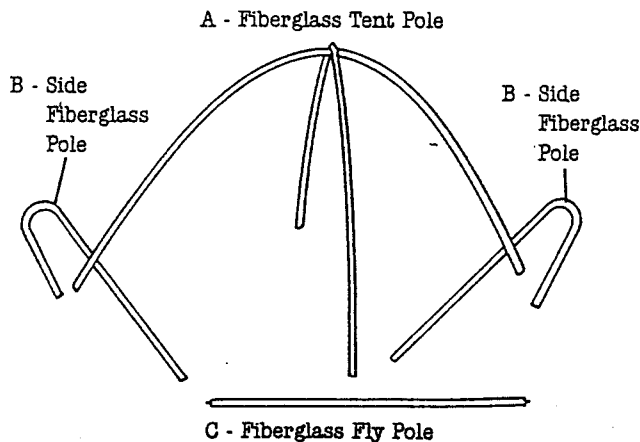

Send your request for parts to: **The Wenzel Company**
502 Orchard Street
New Haven, MO 63068

KEY NO.	MODEL NO. 36069		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent pole - Main	02-0039	2
B	Side Fiberglass Tent Pole	99-0024	2
C	Fiberglass Fly Pole	02-0040	2
	Complete Frame	53606900	1
	Replacement Fly	36069FLY	1