

# MODEL 35849 - LODGEPOLE I

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETTING UP THIS TENT.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**

To prolong the life of the tent floor, select a level, clean area for the campsite.

To prevent damage to the zipper, unzip the door to allow air to enter the tent.

 
**STEP 1:** Separate frame sections by color.

**STEP 2:** Spread tent out flat, floor side down.


Insert stakes through stake loops at each corner.

Stake down tent by hammering each stake at a 45° angle with a hammer or mallet, making sure to pull tent out even and tight.

Stake down remaining loops along the sides, front, and back.

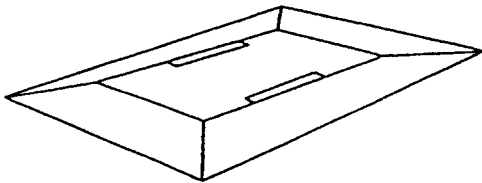

**STEP 3:** Locate one red, one blue and two yellow pole sections. Join blue pole to shortest end of red pole. Join reduced end of one yellow pole to end of blue pole and one to end of red pole. While leaving tent flat on the ground, insert tent frame section through the webbing loop and then through the tent sleeve at front of tent. Adjust pole so center curve of frame is in middle of sleeve. Slide loops over clips at elbows of frame.

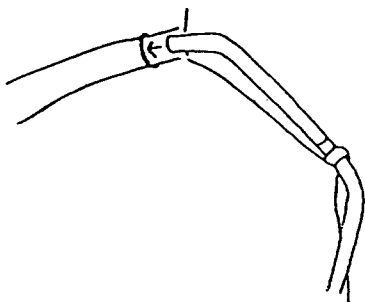 


Repeat same procedure for rear of tent.


**STEP 4:** With remaining eight tubes, four color coded green and four color coded brown, assemble into pairs forming four side upright poles.

Join these poles to the tubes color coded yellow.

 **STEP 5:** With a person on each side of the tent, push up on the tent frame. Adjust frame until tent is in upright position.

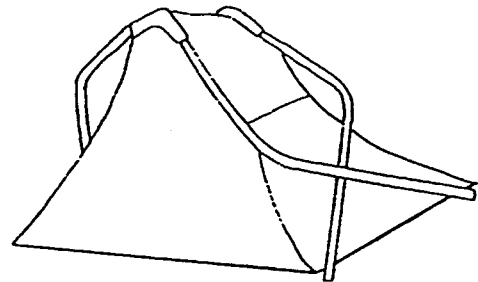

Tent should appear as shown.

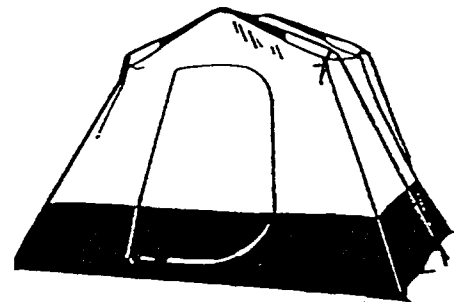 

For your convenience, there are hanger loops located inside your tent. These can be used to hang small camping gear.

**NOTE:** To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag, which is provided.

To roll tent up, fold into thirds lengthwise toward the door. At opposite end of the door, start a small tight roll and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Slide tent, frame and stakes into carry bag. Make sure tent is clean and dry before storing.

# SAFETY AND CARE WARNING!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

### DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY.** THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

 
Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



## REPLACEMENT PARTS

If you have questions or need to order to a part, call 1-800-325-TENT. Have your model number and part number ready when you call. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

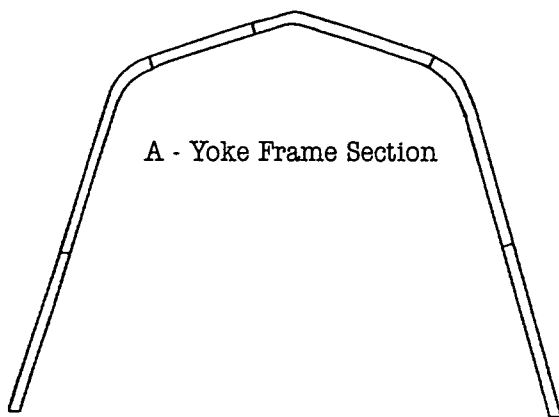

Send your request for parts to: **The Wenzel Company**  
113 Industrial Drive  
New Haven, MO 63068

KEY NO.	MODEL NO. 35849		QTY. REQ
	DESCRIPTION	PART NO.	
A	Yoke Frame Section	97-0007G	2
	Complete Frame	53581300GS	1