

Model – WG31209

 
Assembly Instructions

Important: We advise you to assemble the tent once before going camping to become familiar with the assembly. It is recommended two people be involved in the set up operation


Note: To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter tent. To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and mesh the window.

Note: Please look at the replacement parts diagram to see how your frame is assembled.

Step 1: Spread tent out flat, floor side down. Unzip doors. Stake down the main tent room first, by inserting stakes through the rings located at the base of the main tent room. Stake down by hammering each stake into the ground at a 45-degree angle, making certain to pull the main room floor out tight, so there are no wrinkles in the inside tent floor. Continue to stake down the tent by inserting stakes through the webbing stake loops at the corners of the side rooms. Make certain the side room floors are pulled out even and taut.

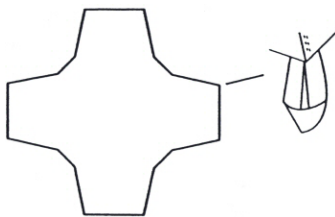


 Step 2: Locate the center hub (D). Go to the center roof of the tent and insert one of each of the eight fiberglass sections, attached to the center hub through the tent sleeves at the very center roof of the tent. The flat, smooth side of the center hub should be up. Once the fiberglass sections are inserted into the sleeves, the fiberglass sections should be inserted and seated into the center hub.

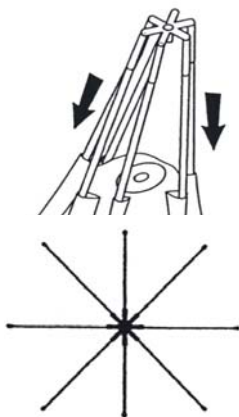

Step 3: Insert the knob on the underside of the center hub into the reinforced pole of the center roof of the tent. The fiberglass sections should be extended to hold the center roof of the tent in place.

 Step 4: Locate the four fiberglass Ridge poles (Key A). Extend each pole by inserting the fiberglass sections into the metal ferrules. Each ridgepole will have a plastic elbow joint on each end. Slide one ridgepole to each of the pole sleeves located on the ends of the tent side rooms. Attach small hooks at each roof corner to the holes in each of the plastic elbow joints. Flexing the fiberglass will be necessary.

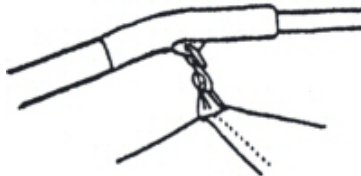


Step 5: Unfold the fly and place over the tent.

Step 6: Locate the eighth steel side uprights (Key B). Joint the upper and of each upright, which will have a metal ring attached for the fly attachment near the end, to the plastic elbow joints on each of the side rooms. With one person on either side of the tent, raise the side rooms by raising the side uprights poles and placing the open end of the poles over the metal pins at the base of the tent. Repeat this step with the remaining side rooms and steel side uprights.



 
Step 7: Attach the hooks on the fly corners to the metal rings on each of the side uprights. Fasten the Velcro fasteners, which are sewn to the underside the fly corners to each of the side uprights.

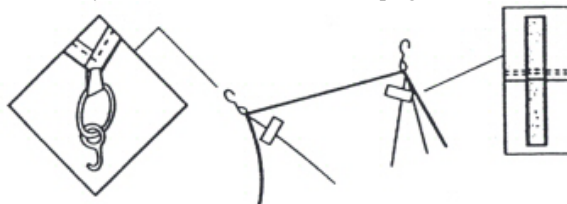

Step 8: And the remaining steel center adjustable upright and enter the tent. Carefully Place the open, upper and of the steel center pole over the knob of the center spider hub. Adjust the center pole to the desired tents center height.

Note: If you wish to use your folding table in the center of your tent, you can Place the center upright through the center hole in the table and in place the upper and of the pole over the knob of the center spider hub.

 Step 9: There are guy rope loops located on the fly of the tent. Tie a guy rope to each of these webbing loops. Make a loop at the opposite end of the guy rope by using the plastic slider and place loop over tent stake. Stake guy rope to the ground with the extras stakes that are included. Adjust slider to make guy rope tight. Tent should appear as shown.

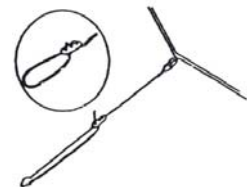

Note: To take down tent, follow steps above and the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with straps. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing. To prolong the life of the tent floor, always select a level, clean area for the campsite.



Assembly Instructions

Warning!

Keep all flame and heat sources away from this tent fabric.

This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render flame-resistance properties ineffective.

Danger:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in sunlight for prolonged periods of time, fabric will fade and weaken. UV damages not covered by the manufacturers warranty. Do not store tent on concrete floor.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

Send your request for parts to:

American Recreation Products, Inc.
1224 Fern Ridge Parkway
St. Louis, MO 63141-4451

 


Maker of the Genuine Swiss Army Knife

Replacement Parts

If you have questions or need to order a part, call 888 797-2769
Have your model number and part number ready when you call.

Do not order by reference Key number

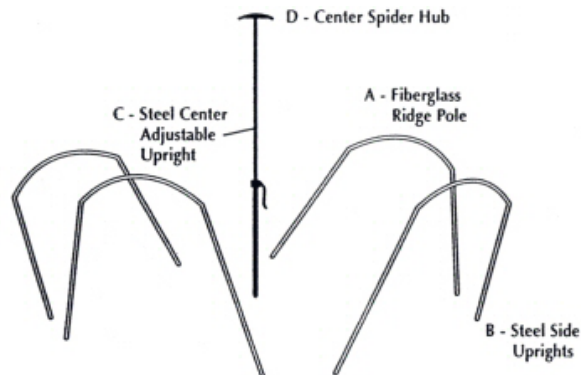

Key Number	Model No. WG31209		Qty. Req.
	Description	Part Number	
A	Fiberglass ridge poles	02-0100	4
B	Steel side uprights	00-0069	8
C	Steel center adjustable upright	02-0102	1
D	Center spider hub	02-0101	1
	Complete frame	WG31209FR	1
	Replacement fly	WG31209FLY	1
	Carry bag	WG31209BG	1
	Divider curtain	WG31209DC	3
	Guy ropes	A1001-WG	12
	Plastic stakes	7.5 Stake-WG	28
	Mud mat	WG31209MAT	1
	Table	WG31209Table	1

If you have any questions you may also visit our website at: www.camping-n-gear.com