


# Model 35842 – Star Lite

## Assembly Instructions

**Important:** We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. Please look at the replacement parts diagram to see how your frame is assembled.


- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, un-zip the door, prior to tent set up, to allow air to enter the tent.

**Step 1:** Spread tent out flat, floor side down, and stake the four Corners.

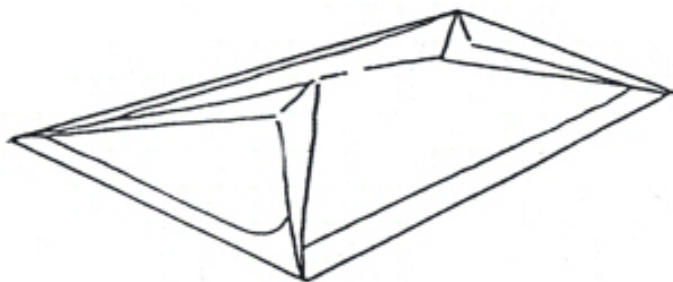

**Step 2:** Locate the guy out of loops located on each side of the tent and at the front the gander rear peak corners. Next, locate the four guy out ropes. The longer guy rope is for the front and the shorter ropes are for the rear and sides. Tie each guy rope into the appropriate guy loops on the tent.


**Step 3:** And the fiberglass frame pole sections by pulling out each section and placing them into the metal ferrules.

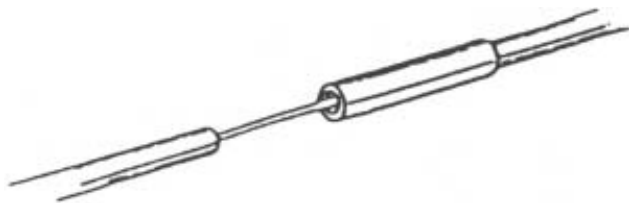

**Step 4:** The shortest pole goes to the rear of the tent. Insert one end of the pole into the triangular shaped fabric pocket, located at the center on the underside of the rear awning, and the other end into the ground.




**Step 5:** The remaining two poles will form an “A” shape at the front peak of the tent. Place one end of each pole into the reinforced triangular shaped fabric located at the center of the underside of the front awning. The opposite end of each pole section should be inserted into the pockets located at each front corner of the tent.

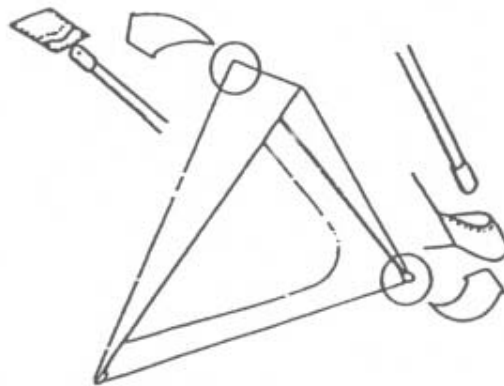

**Step 6:** Starting with the front, pull out guy rope until front of the tent is in the upright position. Keeping guy rope stretch, stake into ground. Repeat saying step for rear of tent. After completing front and rear, continue to guy out sides of tent.


**Step 7:** After all Guy ropes are staked, the tent should be completely upright. Using sliders, adjust the Guy ropes to make sure the center seam of the tent roof is stretched tight.

Tent should appear as shown.

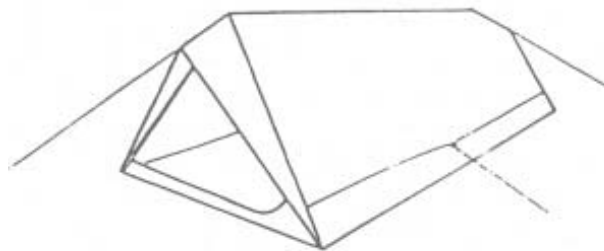

A convenience pocket is provided for storing small camping gear.

Also for your convenience, it compression sack has been included with this tent to make the unit more compact for biking and hiking. Simply Insert the rolled tent into the sack and set up.

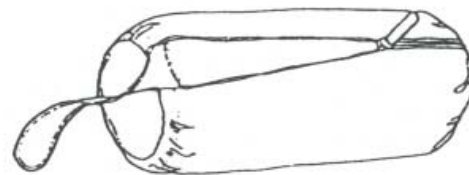

**Note:** To take tent down, follow steps above in the reverse order. Be sure to leave door and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided.

To roll tent up, folded into thirds lengthwise toward the door. Place poles in pole bag on top of folded tent. At opposite end of the door, start a small, tight roll and roll toward the door. Once rolled, tie string or rope around tent to hold into place. Slide tent, along with pole bag and stake bag, into compression sack.

# Safety And Care Instructions

## Warning!

**Keep all flame and heat sources away from this tent fabric!** This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

### DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

### Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

### Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



## Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at [www.camping-n-gear.com](http://www.camping-n-gear.com) Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**  
113 Industrial Drive  
New Haven, MO 63068

A - Fiberglass Rear Frame Pole



B - Fiberglass Front Frame Pole



Key #	Model No. 35842		Qty. Req.
	Description	Part Number	
A	Fiberglass rear frame pole	93-0001	1
B	Fiberglass front frame pole	93-0002	2
	Complete Frame	53571900	1