

# Model 36156 - Starwood

## Assembly Instructions

**Important:** We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.

**Note:** To prolong the life of the tent floor, select a level, clean area for the campsite. To prevent damage to the zipper, unzip the doors prior to tent setup, to allow air to enter the tent. To improve the weather resistance of your tent, it is advisable to use a seam sealer to coat all exposed seams. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local sporting good store. For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

**Warning:** During assembly of the main room and side room tent poles (steps 6 and 8), the poles are in tension. If the poles are not held firmly in place by adults during assembly, the tension in the poles may cause them to break, or one end of the pole to flip up, which could cause serious injury to you or others involved in the assembling the tent. To avoid this hazard:

 
- DO HAVE two adults involved in assembling the tent.
- DO HAVE one adult hold the end of the tent pole in place over the pin at the rear of the tent, while the second adult gently raises the roof of the tent and the crossed tent poles. When the tent and poles are raised, the first adult who is at the rear of the tent goes to the front of the tent and completes the pole connection at the front of the tent.

Failure to follow this warning could cause serious injury to you or others involved in assembling this tent.

**Step 1:** Spread tent out flat, floor side down. Unzip the doors.

**Step 2:** Extend the fiberglass frame poles by pulling out each section and placing it into the metal ferrules. You will have five frame poles. The two longest pole sections (Key A) are the main tent poles. The two remaining, Longer pole sections (Key B) are the side poles. The shortest pole, which has a ferrule on one end and a plastic end cap on the opposite end, (Key C) is the center pole.

**Step 3:** Slide each main fiberglass tent pole section (Key A) into the sleeves located on the roof of the tent. Straighten and adjust sleeves along the frame poles to avoid catching or tearing them. Match sleeves opposite each other to keep the straight. Position poles so they form an "X" across the tent.

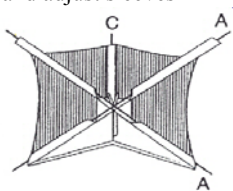


**Step 4:** Working from the back of the tent, take the end of the center frame pole with the plastic cap (C) and insert it into the sleeve at the center roof of the tent and into the sleeve pocket at the center front of the tent. Make certain the end of the center pole is inserted to the very end of the front sleeve pocket.



**Step 5:** One adult should now go into the front door of the tent and gently lift the roof of the tent and the front tent poles up off the ground. The other adult should carefully flex the tent poles, one at a time, and insert the pins located at the rear base of the tent into the ferrules at the end of the poles, starting with the center pole and then moving to the two main room poles.

**Note:** These pin and ring frame attachments for the main tent poles will have double pins. One set is to be used for the side fiberglass poles.

 **Step 6:** (Please read and follow the IMPORTANT SAFETY WARNING that appears before step 1) When the tent and poles are raised, the first adult who is at the rear of the tent, goes to the 1 of the tent, flexes the fiberglass pole and places the ferrule at the end of the main tent pole over the pin at the base of the tent. Repeat step for the other main tent pole. Clip plastic hooks to the fiberglass frame poles.

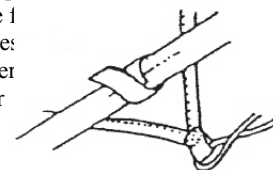


**Step 7:** Tie the three poles into place with the fabric tie located at the center roof.

**Step 8:** (Please read and follow the IMPORTANT SAFETY WARNING that appears before step 1) To assemble side rooms, locate the longer remaining fiberglass poles (B). Insert one of the pole sections through the pole sleeve at the top of the side room. With an adult on each end of the side room pole, gently flex the pole into an arch and place the ferrules at the end of the side room pole over the pins at the base of the tent. Repeat the same procedure for the remaining side room. Clip plastic hooks to frame.

**Step 9:** Stake down tent by inserting the stakes through the webbing stake loops and through the metal O-rings at the base of the tent. Hammer stakes into ground at 45° angle using a hammer or mallet. Make sure the tent is pulled out even and tight.

**Step 10:** Place the fly over the tent. Attach hooks on the fly to the loops located on the center roof of the tent and base of the tent.

 **Step 11:** There are guy loops located on the fly of the tent. Tie the four longer guy loops to the loops over the two side doors and the two shorter ropes to the loops on the edge of the fly, over the rear window vents. Make a loop at opposite end of guy rope by using a slider (as shown) and place loop over tent stake. Adjust slider to make guy rope tight. Extra tents stake have been provided for this. Tent should appear as shown.

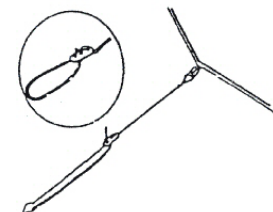

Divider curtains are included which can be used to divide your tent into separate rooms for privacy. Simply attach to the loops located at the center walls, inside your tent. Also, convenience pockets are provided for storing small camping gear.

**Note:** To take down tent, follow the above steps in the reverse order. Be sure to leave doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, tie string around tent and slide into carry bag. Make sure tent is clean and dry before storing.

# Safety And Care Instructions

## Warning!

**Keep all flame and heat sources away from this tent fabric!** This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

### DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

### Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

### Do not leave your tent set up in direct sunlight

**longer than necessary.** The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

 


## Replacement Parts

If you have an questions or need to order a part, call 1-800-325-8368 or log into our website at [www.camping-n-gear.com](http://www.camping-n-gear.com) Please have your model number and part number available.

Send your request for parts to: **The Wenzel Company**  
113 Industrial Drive  
New Haven, MO 63068

DO NOT ORDER BY REFERENCE KEY NUMBER

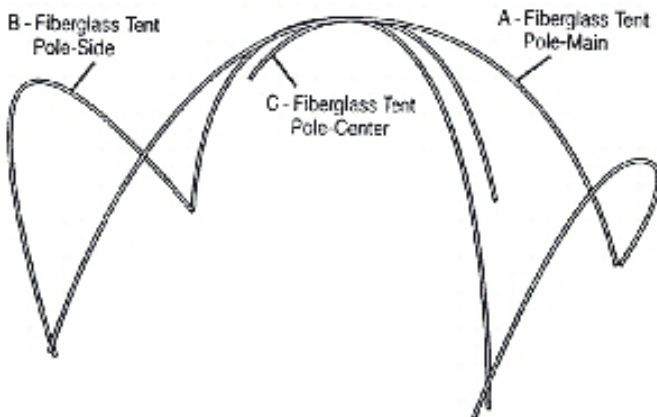

Key Number	Model No. 36156		Qty. Req.
	Description	Part Number	
A	Fiberglass tent pole – Main	01-0067	2
B	Fiberglass tent pole – Side	03-0030	2
C	Fiberglass tent pole – Center	03-0031	1
	Complete frame	36156FR	1
	Replacement fly	36156FLY	1
	Divider curtain	36156DC	1
	Guy rope	A1001	6
	Stakes	7.5 STAKE	15