



SWISSGEAR™


ASSEMBLY INSTRUCTIONS

MODEL - SG33020

IMPORTANT: We advise you to assemble the screen house before going camping to become familiar with the set up. It is recommended two people be involved in setting up this screen house.


NOTE: Please look at the replacement parts diagram to see how your frame is assembled.

STEP 1: Spread screen house out flat with frame pole sleeves on top.

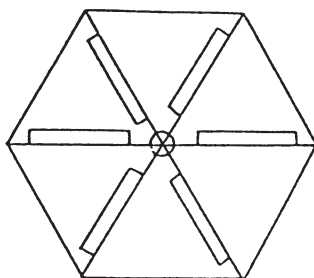


STEP 2: Extend the chaincorded pole sections. There will be a total of 12 pole sections. The six straight poles are the side uprights (B). The six poles with a clip lock on one end and a plastic corner joint attached (A) are to be used as the roof ridge poles.


STEP 3: While leaving the screen house flat on the ground, insert the straight end of one of the ridge poles into one of the pole sleeves on the roof of the screen house. Insert the pole into the opening of the plastic hub (C). Make sure the spring clip located on the pole snaps into place in the slot on the plastic hub. Repeat the same procedure for each of the six roof ridge pole sections.

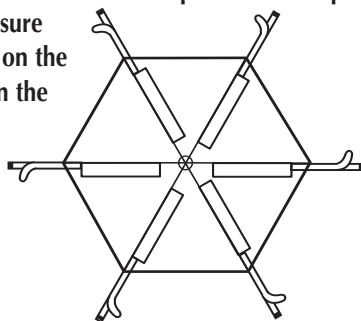

STEP 4: Attach the hooks on each of the eave corners to the plastic corner joints, which are attached to the roof ridge pole.

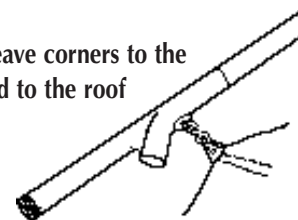


STEP 5: Insert the end with the spring clip lock on one of the side upright poles into the open end of one of the plastic corner joints. Again, make certain the spring clip located on the pole snaps into place in the slot of the plastic corner joint. Repeat this step with each of the side upright poles.

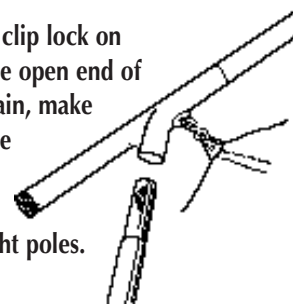

STEP 6: With a person on opposite sides of the screen house, push up on the screen house frame, raising two poles at the same time. Continue until all poles are raised. Insert opened end of each side upright over the pin located at each of the six corners of the screen house.


Adjust frame until screen house is in upright position.

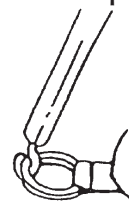

STEP 7: Insert stakes through the metal rings located at each corner of the screen house. Stake down by hammering each stake into the ground at a 45° angle, using a hammer or mallet.


STEP 8: Unfold fly and place over screen house.

Attach the plastic hooks at each corner of the fly to the metal loops attached to the side upright poles.

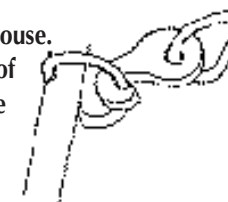

NOTE: Make sure flaps located at bottom edge of screen house are on the inside before staking down.

Screen house should appear as shown.

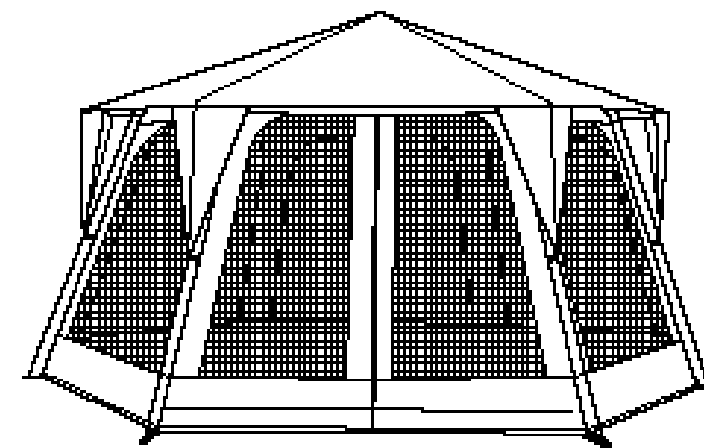

NOTE: To take down screen house, follow steps above in the reverse order. Place stakes into stake bag and poles into carry bag, which are provided.

The screen house should be folded into equal parts toward the center of the screen house to distribute the bulk. Start a small tight roll, the width of your carry bag. You may wish to lay the poles on top of the screen house and roll the screen house around the frame. Once rolled, secure with strings or rope. Slide screen house into carry bag.

Make sure screen house is clean and dry before storing.



SWISSGEAR™

ASSEMBLY INSTRUCTIONS

MODEL - SG33020

DO NOT LEAVE YOUR SCREEN HOUSE SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in sunlight for prolonged periods of time, fabric will fade and weaken. UV damage is not covered by the manufacturer's warranty. Do not store screen house on concrete floor.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



SWISSGEAR™

From the Maker of the Genuine Swiss Army Knife™

WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC. This screen house is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the screen house fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...


1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

REPLACEMENT PARTS

If you have questions or need to order a part, call 1-888-797-2769. Have your model number and part number ready when you call.

DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to: American Recreation Products, Inc.
1224 Fern Ridge Parkway
St. Louis, MO 63141-4451

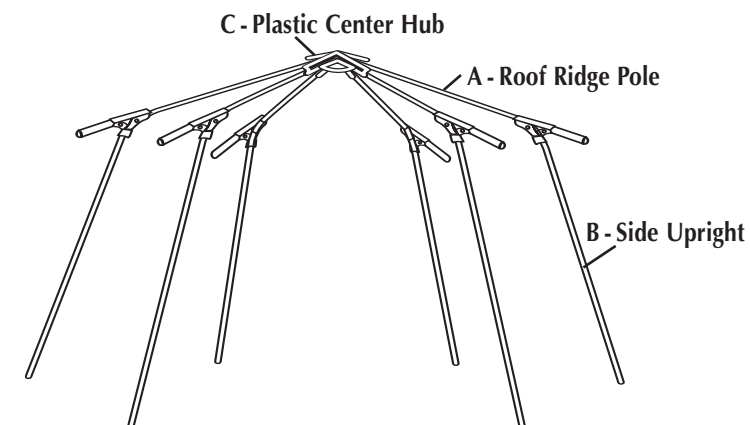

KEY NO.	MODEL NO. SG33020, 15' x 13'		QTY. REQ
	DESCRIPTION	PART NO.	
A	Metal Roof Ridge Pole	04-0055BS	6
B	Metal Side Upright	04-0056BS	6
C	Plastic Hub	97-0061	1
	Complete Frame	SG33020FR	1
	Replacement Fly	SG33020FLY	1
	Stakes	PIN STAKE	6